


Thank you for considering Scotsman, world leaders in ice machine technology for more than 50 years.

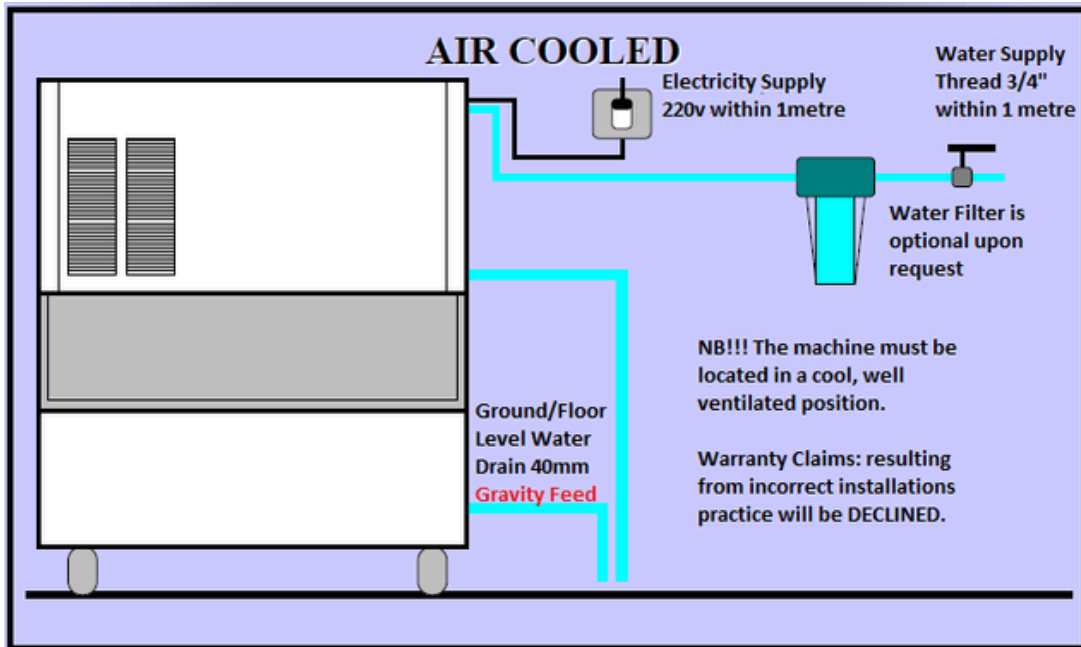

1)




- Unbox the ice machine.
- Visually inspect the exterior of the machine to ensure no damage was incurred during transit.
- Remove the screws from the two side panels and top panel, keep screws in safe place.
- Remove vertical ice chute.

2)




- Unscrew the unit's frame from the wooden base.

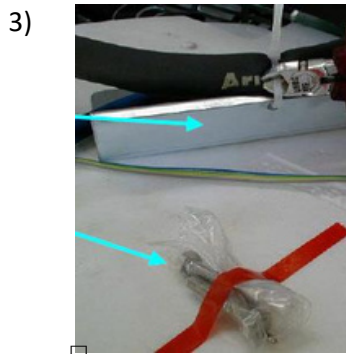


- Remove the polystyrene protection, sensor bracket, securing screws and fibre washers from the inside of the machine.
- Cut the cable tie securing the ice level control to the suction line pipe.



- Secure the ice level control sensor to the bracket inside the storage bin.

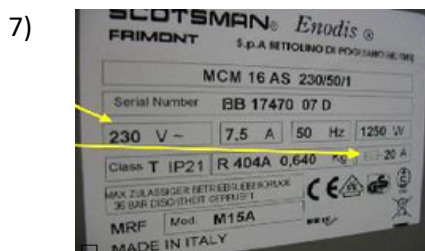

- Check the data plate of the machine located on the rear panel for correct voltage as well as for the proper wiring/fuse size.
- All machines require a solid earth wire.

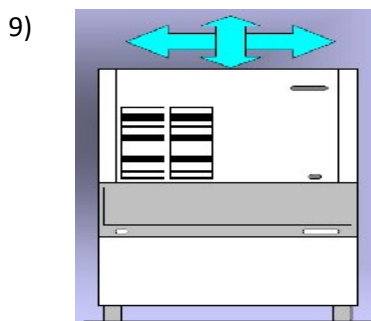


- Level the unit in both directions, front to rear and right to left using the adjustable feet on the storage bin.



- Place the metal bracket that holds the ice level control between the machine and the bin in line with the opening of the chute.



- Replace the ice chute, making sure to hook it on to the upper side of the evaporator opening.
- Replace all panels and ensure all screws are replaced.

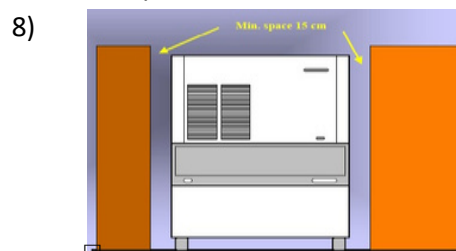

- Check for the correct ambient conditions:
 - Min. ambient temperature 10°C
 - Max. ambient temperature 40°C
- Adequate space must be left for proper water and electrical connections on the back of the machine. There must be a minimum clearance of 15 cm on both sides for the best routing of air.



- Install an adequate electrical plug according to the local standards and regulations.

11)



- Connect the water inlet hose provided with the ice machine to the water inlet valve situated on the back of the machine and connect the other end of the inlet hose to the water supply (3/4" male thread tap).

Min. water pressure 1 bar

Max. water pressure 5 bar

Min. water temperature 5°C (Must be connected to cold water tap)

Max. water temperature 35°C

13)



Turn on the tap on.

12)



- Connect the water drain flexible hose supplied with the machine to the water drain fitting situated on the back of the machine using the clamp.
NB!!!! Make sure the clamp is properly secured, in order to prevent leaking.
- The other end of the flexible drain hose to go to **floor point** drain.
Machine must be at least 15 cm higher than the drain point.

14)



Switch the power on.

.

